


Dear Art Lover,


Thank you for your interest in our timepiece, ClockClock 24, and our studio Humans since 1982. This user manual will provide you with all the necessary information regarding the installation and the operation of ClockClock 24. Carefully read the instructions before using ClockClock 24.

Please, contact us at support@clockclock.com if you need any further assistance.

Humans since 1982

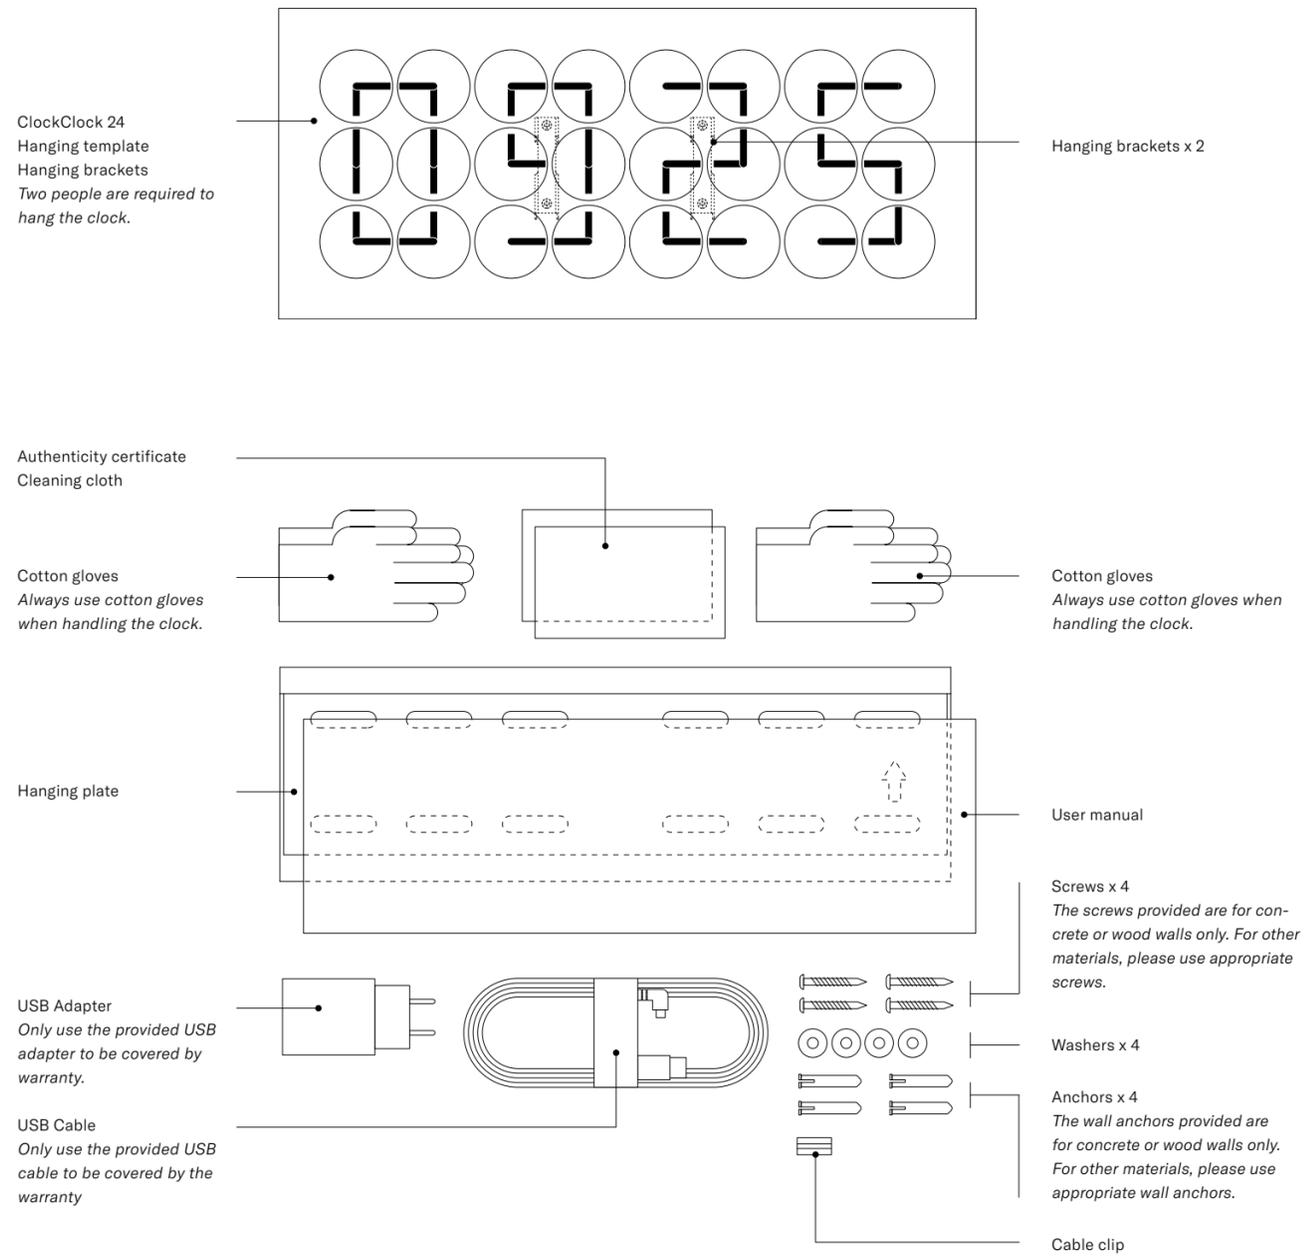

Description

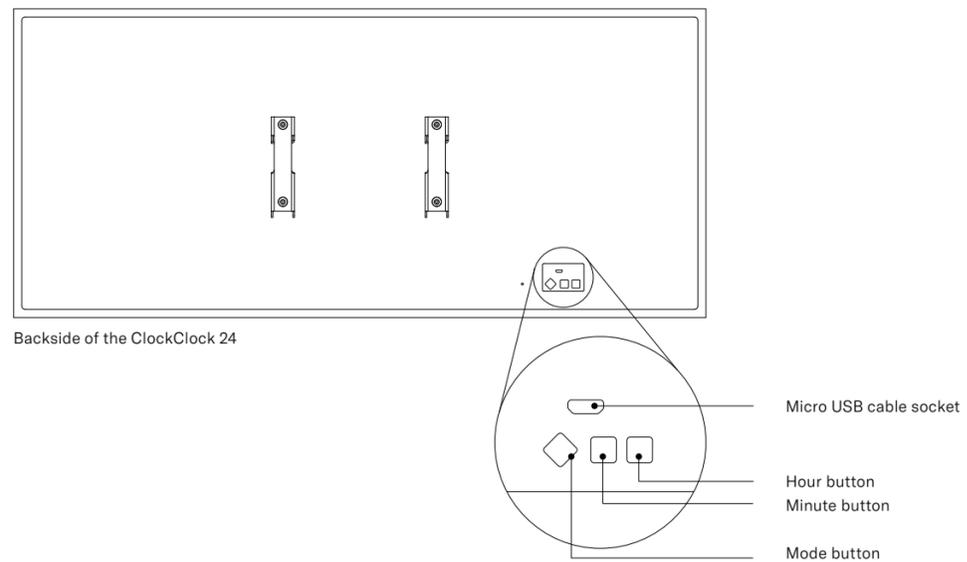


Recommended Tools

1. Spirit Level
2. Power drill
3. Pen
4. Screwdriver

Warning! Before hanging the clock on the wall, make sure the load-bearing capacity of the intended wall and wall anchors is sufficient for the 18kg (40 lbs) weight of the clock.


Step 1 - Mounting the Hanging Plate

To determine the position of ClockClock 24 on the wall, please use the enclosed Hanging Template as well as a spirit level as a positioning aid. Mark the position of the drill holes by using the hanging template. Make sure there are no pipes or other supply lines near the marked drill holes.

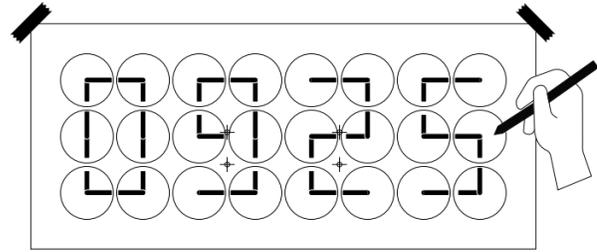


Drill the holes in the wall dimensioned to fit the wall anchors properly. Then, place the wall anchors and fix the hanging plate with the provided screws and washers.

Warning! The screws and wall anchors provided are for concrete or wood walls only. For other materials, please use appropriate screws and wall anchors.

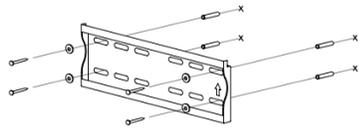


Step 2 - Hanging ClockClock 24

Before hanging the clock on the wall, place the clock front down on a protective surface. Carefully plug the Micro USB cable plug into the socket situated at the backside of the clock. You can use the black foam sheet of the packaging for this purpose.

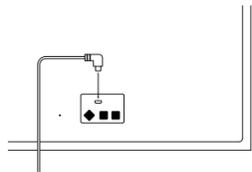

Hang the clock on the hanging plate. Make sure the brackets hook on both the top and the bottom of the plate. Center the clock on the plate.


Warning! Two people are required to hang the clock.

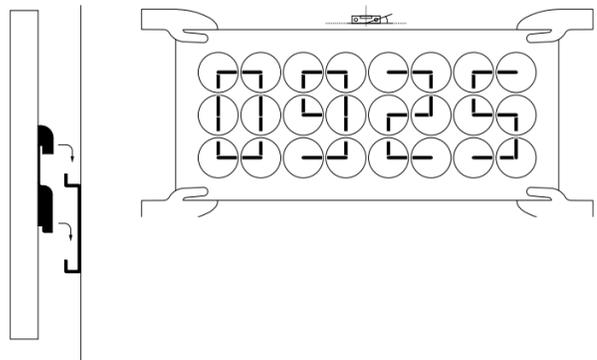


Step 3 - Starting ClockClock 24

Before starting the clock, move all clock hands manually pointing down to position 6:30 am/pm. Then, plug the USB adapter into the wall socket.

Warning! To prevent any stains on the clock and the clock hands, always wear the provided cotton gloves when handling the clock.

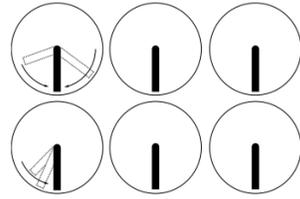

To start the clock, press any of the three buttons (hour, minute, mode) situated at the back of the clock on the left-hand side. You will hear a beeping sound and the clock hands will start to move. The default time is set at 12:00 am/pm.

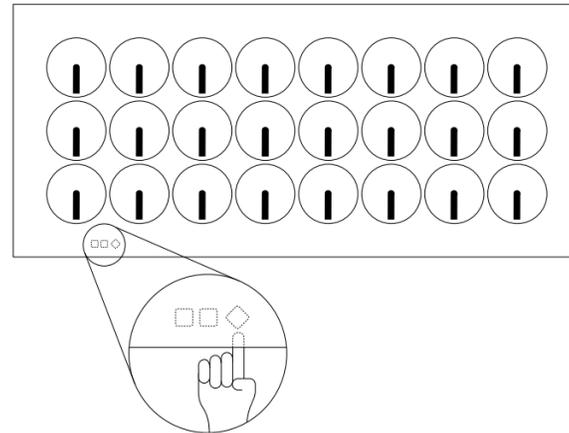

After starting the clock, the position of some clock hands might still need to be adjusted. In order to have the clock hands perfectly aligned with each other, you can fine-tune the clock hands' position by manually adjusting the clock hands while the time is displayed.


To switch the clock off, press any of the 3 buttons (hour, minute, mode) situated at the back of the clock until you hear 3 beeps. All clock hands will immediately move to position 6:30 am/pm and will remain in this position until the clock is switched on again. The clock is now in sleep mode and is using low electric power to remember the time format and mode settings.

Step 4 - Setting the Mode

To see the mode currently selected, push the Mode button situated at the back of the clock. Once the Mode button is pushed, the clock hands will display the current mode for 20 seconds.

As long as the mode is displayed on the clock, you can change the mode to the desired one. To change to another mode, successively press the Mode button until the desired mode is displayed.

You can consecutively press the Mode button as many times as necessary until the desired mode is displayed.

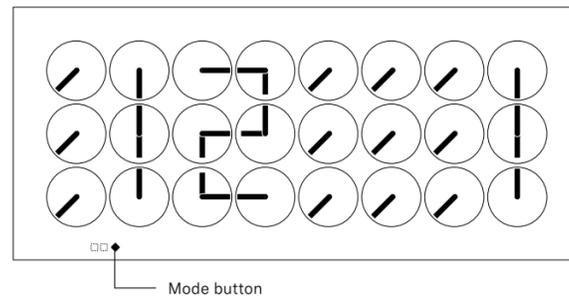

ClockClock 24 Modes

ClockClock 24 comes with 6 modes including two different time formats and three types of choreographies arrangements: elaborate, medium and minimal.

Mode 1 - Elaborate


All the clock hands will turn more frequently to display the exact time and perform different choreographies.

Mode 2 - Medium

All the clock hands will perform a short choreography once every minute to display the exact time.

Mode 3 - Minimal

Only the necessary clock hands will turn once every minute to only display the exact time. Use this mode for fine-tuning the clock hands.

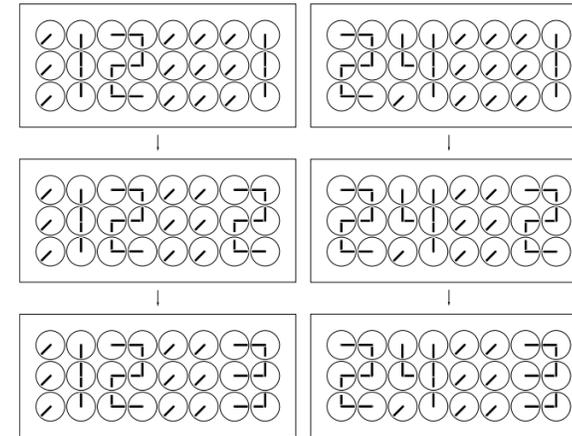

Mode 12:1 Elaborate

12 hour time format. 10 choreographies.

Mode 24:1 Elaborate

24 hour time format. 10 choreographies.

Mode 12:2 Medium

12 hour time format. 5 choreographies.

Mode 24:2 Medium

24 hour time format. 5 choreographies.

Mode 12:3 Minimal

12 hour time format. Only showing the time.

Mode 24:3 Minimal

24 hour time format. Only showing the time.

Step 5 - Setting the Time


Push the Hour or Minute button to see the time currently displayed on the clock. The clock hands will immediately start to move when pushing the Hour or Minute buttons. As long as the time is displayed on the clock, you can adjust it:

Push the Hour button once to increase the time by one hour.

You can consecutively press the button as many times as necessary until the desired time is displayed.

Push the minute button once to increase the time by one minute.

You can consecutively press the button as many times as necessary until the desired time is displayed.

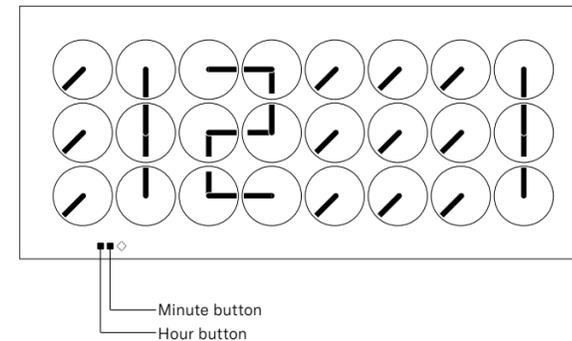

Cleaning & Adjusting ClockClock 24

ADJUSTING THE CLOCK HANDS

To adjust the clock hands' position, you have to align the clock hands manually. For this, you can either switch the clock off and move all the clock hands down to position 6:30 am/pm and start the clock again. You can also select the 3rd Mode (Minimal) and fine-tune the clock hands position by carefully aligning them with each other while the time is displayed.

ADJUSTING THE CLOCK LEVELING

If the clock is not leveled you can adjust the hanging brackets to reach horizontality. Identify the side of the clock that appears to be lower. Remove the clock from the wall and place the clock front down on a protective surface. Turn slightly the black screw situated on the hanging bracket on the side you want to lift. Hang the piece and verify the horizontality. You can repeat the process until the piece is perfectly horizontal.

ADJUSTING THE USB CABLE

Fix the USB cable to the wall using the cable clip provided. Insert the USB cable into the cable clip. Remove the adhesive from the back of the cable clip. Place the clip on the wall and tension the cable in a straight line.

CLEANING THE CLOCK

ClockClock 24 is made of a mineral composite (Corian®) that has similar properties to stone, ClockClock 24 is therefore sensitive to impacts. Handle your clock with care.

Once the clock is switched off, you can safely clean its surface. To remove dust, use the provided cleaning cloth. In case of persistent stains such as fingerprints, use isopropyl alcohol to clean the clock. Wipe the surface of the clock completely dry immediately after cleaning to prevent film build-ups.

Warning! Do not spray any liquids directly onto the clock.

Warning! Avoid any other cleaning fluids such as window cleaners as they leave a waxy build-up that dulls the surface of the clock.

BACKUP BATTERY

The clock is equipped with a small backup battery to ensure the clock will remember the time and the selected mode during a short power loss.

MOVING THE CLOCK

Once the clock is switched off, remove the clock from the hanging plate, unplug the cable and place the clock on a soft protective surface.

REPAIRS

Any maintenance or repair work should only be carried out by ClockClock Support Service or an expert authorized by ClockClock. Do not attempt to repair or open the clock yourself.

If you lose the USB cable or USB adapter, please contact us at support@clockclock.com for buying a replacement. Only use the provided USB cable and USB adapter provided in the package. Any use of unapproved devices will void the warranty.

Please use ClockClock 24 with the original clock hands. If replacement clock hands are needed, contact us at support@clockclock.com

WARRANTY

ClockClock 24 is covered by warranty for 2 years starting from the date of purchase. In the case of damage caused due to instructions in this manual not being followed, the warranty becomes invalid. Furthermore, the warranty will expire if ClockClock 24 is tampered with (e.g. altered, opened or modified). Finally, it is required to keep ClockClock 24's packaging to be covered by the warranty. Note that a ClockClock 24 out of warranty can be fixed for additional charges.

GENERAL

- Make sure to read this manual through carefully before using ClockClock 24.
- Do not try to hang the clock on your own. Two people are required to hang the clock.
- ClockClock 24 should never be operated by a person not capable of fully understanding the manual (including children) unless they are supervised by a person responsible for their safety.
- Children can choke on small parts of the clock. Tampering with hands or heavy vibrations can shake clock hands loose. Young children should be properly supervised.

Safety Instructions *continued*

PLACEMENT

- ClockClock 24 can only be mounted and operating in dry indoor spaces. Do not install the clock in places with high levels of humidity.
- ClockClock 24 should never be exposed to direct sunlight, very high/low temperatures, moisture or strong vibrations. The clock should only be operated in temperatures between 10°C and 35°C (50°F to 95°F).
- The clock is sensitive to shocks. Please place it where no heavy movements can occur.

WALL MOUNTING

- ClockClock 24 is not meant to operate in any other way than correctly mounted on a solid wall as it could cause physical damage or bodily harm.
- Make sure the wall you are mounting your clock on can safely support the weight of the clock. The total weight is 18 kg (40 lbs).
- Make sure no cavities, pipes or other supply lines are located on the section of the wall where you will mount the clock.
- Make sure to use wall anchors, screws, and washers are suitable for your wall material to mount the hanging plate and ensure they can support the weight of the clock.
- ClockClock 24 should be installed by someone with basic building experience fully understanding this manual.

CONNECTING TO ELECTRIC POWER

- Never touch the power socket or any other electrical equipment, including ClockClock 24, with wet hands due to the risk of an electrical shock.
- Please beware of the electrical specifications of ClockClock 24, the USB cable and the USB adapter to avoid the risk of short-circuits, fire or electric shock. ClockClock 24 can only be connected to and operated from an approved household electrical outlet. Any other use of ClockClock 24 is strictly prohibited and automatically voids any warranty.
- Only use the USB cable and USB adapter provided to be covered by the warranty.
- Make sure to plug the Micro USB cable plug into the clock carefully to prevent any damage in the plug or outlet.

INTELLECTUAL PROPERTY

The design is protected by intellectual property rights.

DISCLAIMER

ClockClock is not liable for any damages to property or personal injury caused by not following the instructions for use, improper handling or incorrect placement and mounting of the clock.

CE MARKING

CE marking on this products represents the product is in compliance with all directives that are applicable to it.

WEEE COMPLIANCE STATEMENT

European Directive 2012/19/EU requires that equipment bearing the WEEE symbol on the product and/or its packaging must not be disposed of with unsorted municipal waste. It indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities. For more detailed information about the disposal of your old equipment, contact your local authorities, waste disposal service, or the shop where you purchased the product.

DECLARATION OF CONFORMITY

Hereby, Humans since 1982 AB declares that this ClockClock 24 device, is in compliance with the essential requirements and other relevant provisions of the following EU-Directives: 2014/35/EC, 2014/30/EU, 2011/65/EU, 2009/125/EC

Specifications

DIMENSIONS

ClockClock 24	900 x 400 x 38 mm (35,4"×15,7"×1,5")
Weight of clock incl. brackets:	18 kg (40 lbs)
Distance between clock and wall	23 mm (0,9")

ELECTRICAL SPECIFICATIONS

USB adapter input	100V- 240V 50-60 Hz 0.25 A
USB adapter output	5V 2A DC
Micro USB cable	24 AWG / 2C, 300 mm (11,8")
Certified	

